

Fractal VP4 CC Numbers

NOTE: In firmware 5.4.0, some changes to the default settings should be made in order to get the VP4 working correctly. In Devices, turn on **Send CCs On Preset Change** for the VP4 device. On each IA button that controls a VP4 effect block or channel, turn on **Send on Preset Change** and **Update on Preset Change**.

The Fractal VP4 has partial support as of firmware 5.4.0. Unfortunately, this device doesn't ship with predefined CC numbers, so an initial setup step is required. In the MIDI/Remote setup menu, set up the CC numbers as follows:

Parameter Name	CC Number
Scene Select	CC #34
Scene +1	CC #52
Scene -1	CC #53
Input Volume	CC #4
Output Volume	CC #7
Tap Tempo	CC #33
Tuner	CC #35
Tuner on Heel Down	CC #36
VP4 Bypass	CC #20
FX1 Bypass	CC #21
FX2 Bypass	CC #22
FX3 Bypass	CC #23
FX4 Bypass	CC #24
FX1 Channel	CC #31
FX2 Channel	CC #32

Parameter Name	CC Number
FX3 Channel	CC #33
FX4 Channel	CC #34
External 1	CC #11
External 2	CC #12
External 3	CC #13
External 4	CC #14
Preset +1	CC #50
Preset -1	CC #51

Revision #2

Created 22 November 2025 00:37:33 by RJM Music

Updated 25 November 2025 20:54:15 by RJM Music